

 
2022 edition




SR Soundboard & Lights

The Basics

01 Before Turning it On

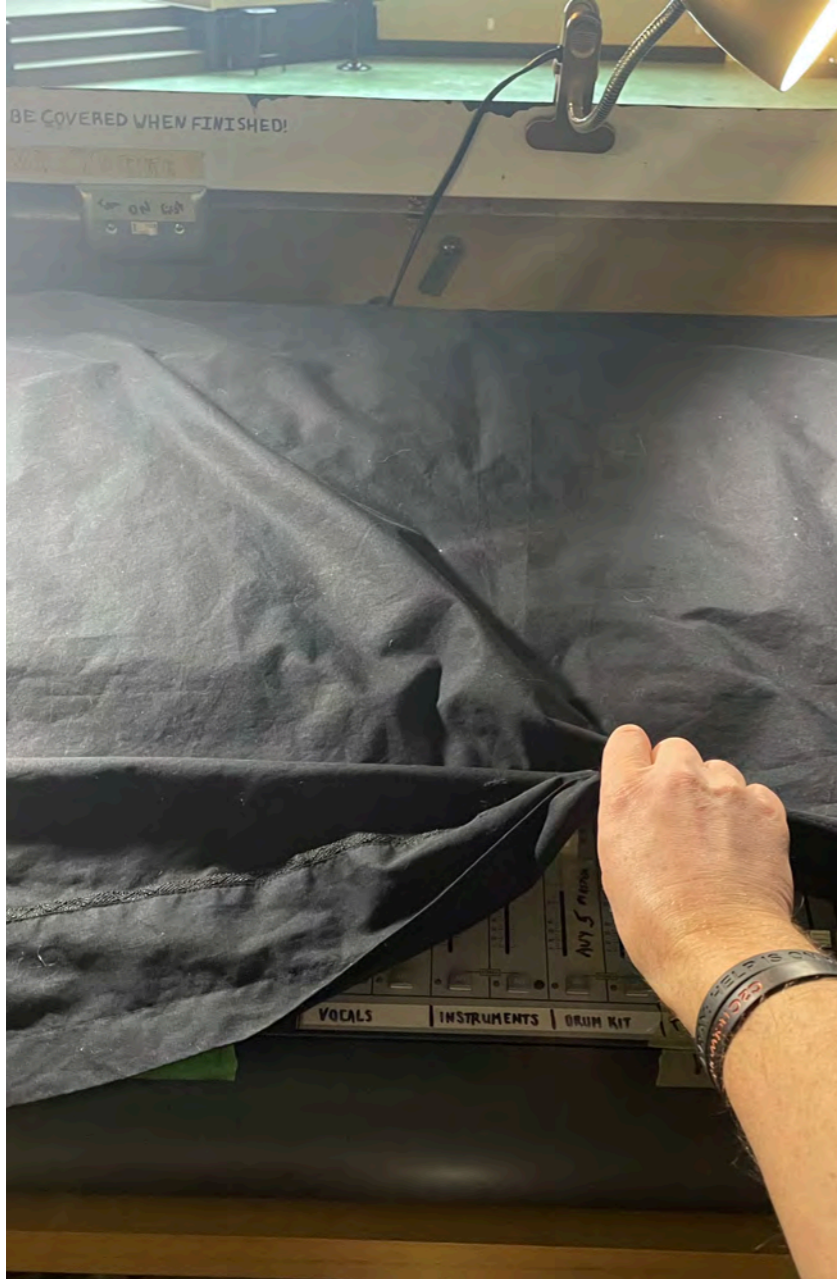

Remove the protective black cover sheet

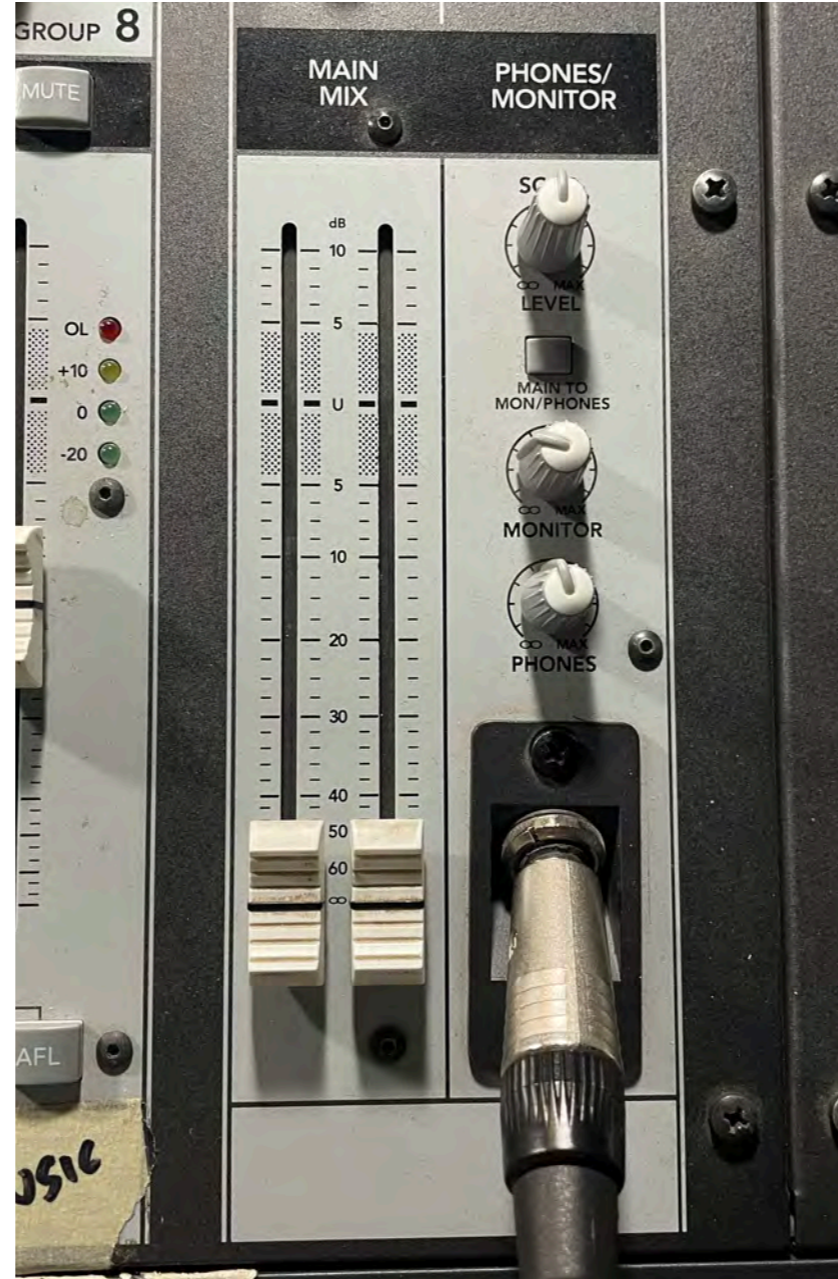 


Make sure the Main Mix Volume Sliders are slid to the bottom



Remember, only automatically sealed beverage containers are allowed in the booth - NO open beverages!

 02 Getting Started

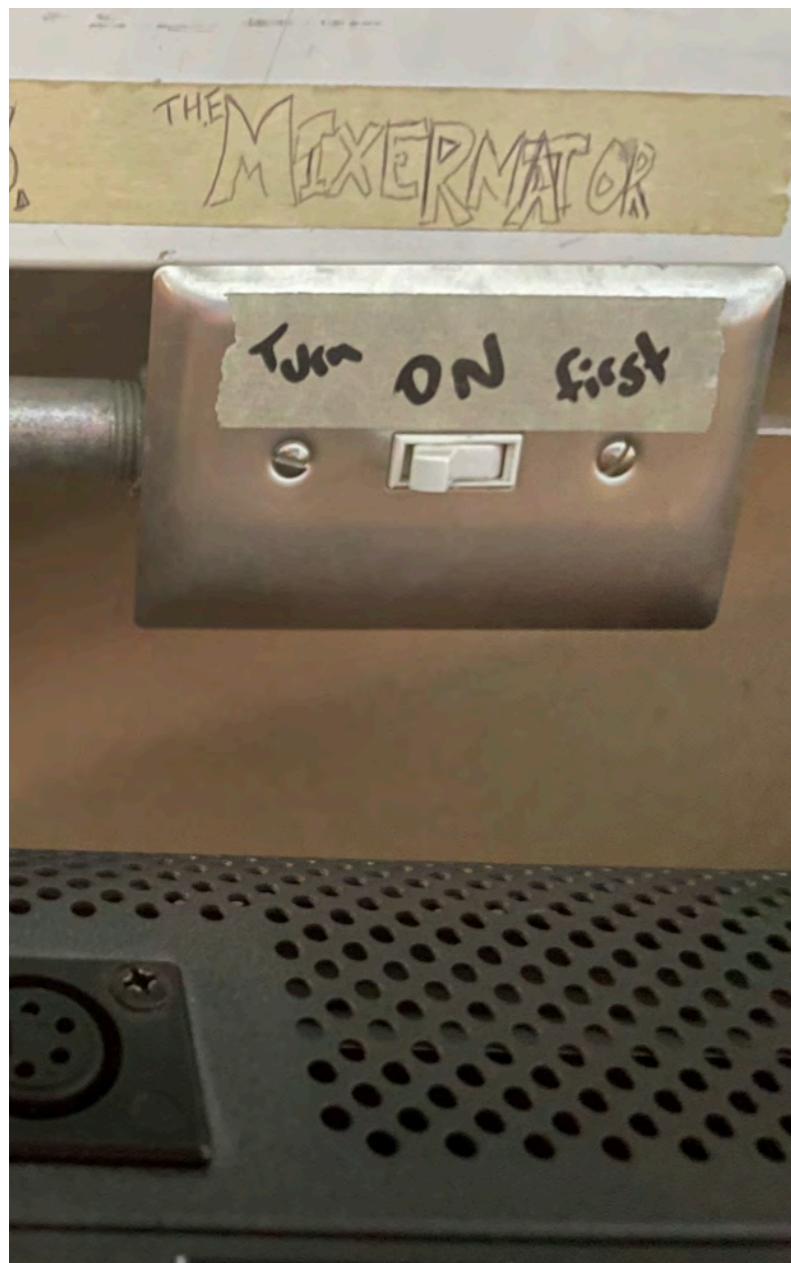

Flip the "Turn ON First" switch to ON and wait a few seconds



Flip the "Turn OFF First" switch to ON



Make sure all Mute Groups are MUTED
The red light beside each group should be lit.


03 Get it Going



Channels 1-7 are used by the drum kit
Channels 8-16 can be used for
instruments & vocals




 To use Channels 8-16, plug in the desired
instruments/microphones into the
corresponding numbers in the input bank
on the stage closest to the drum cage
door.

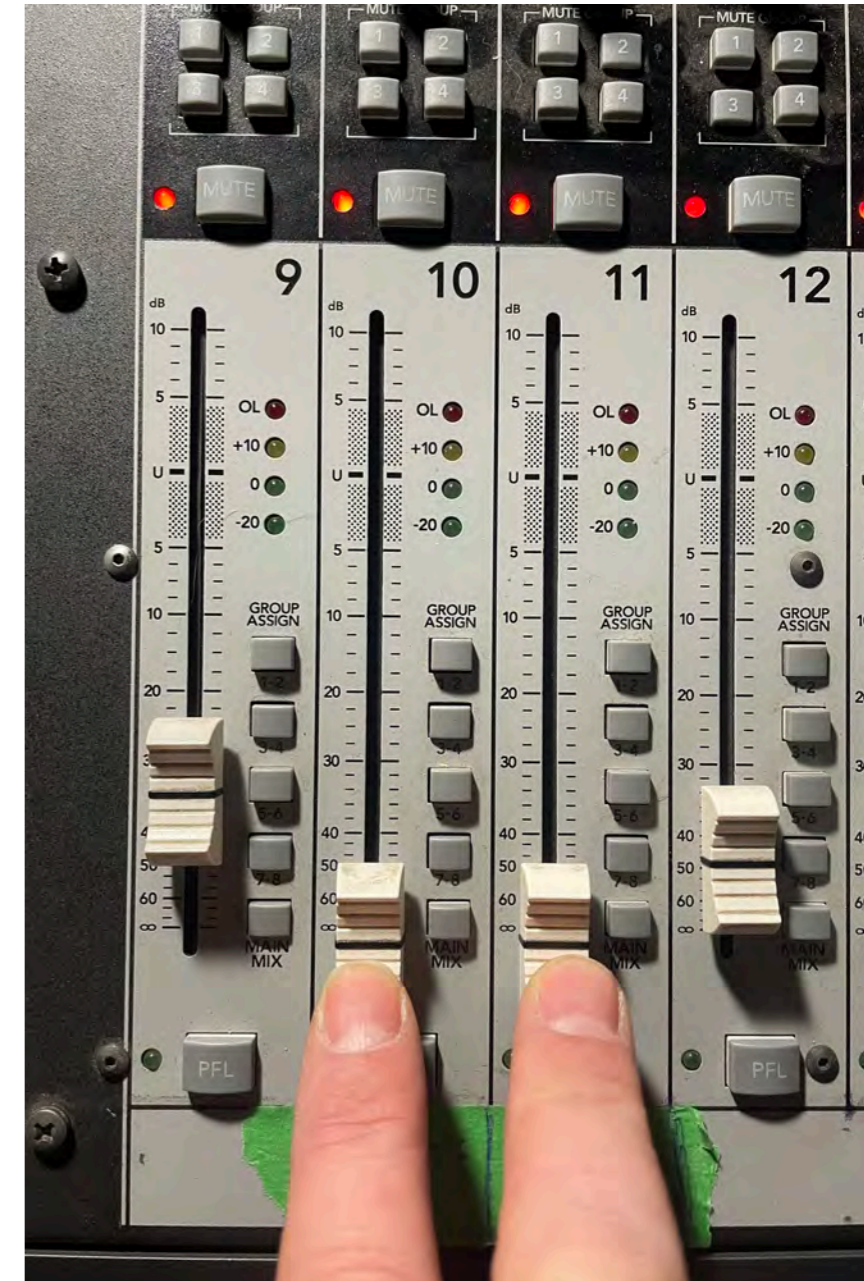

After your instrument/microphone is
plugged in at the stage, lower the channel
sliders being used.

 03 Get it Going

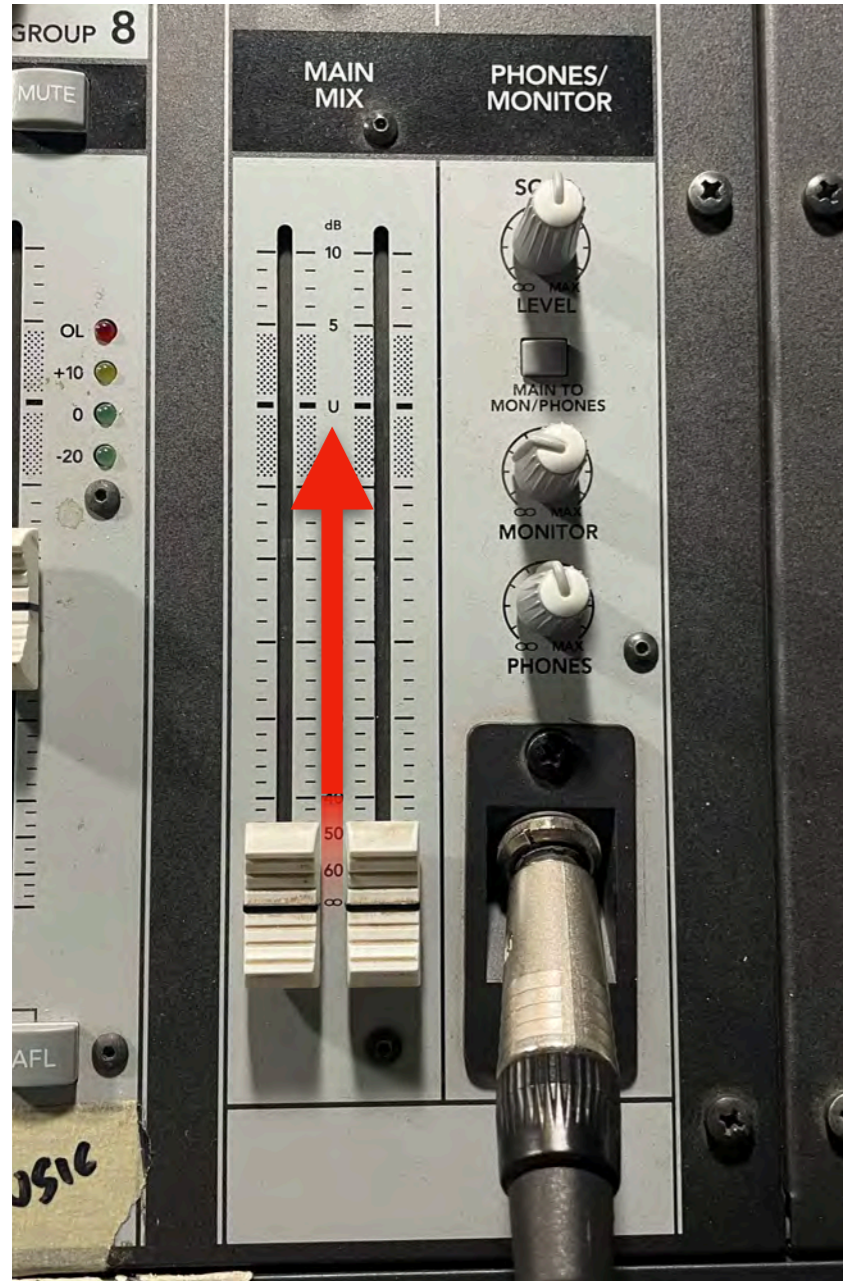

Raise the Main Volume sliders to “U”



Unmute the Mute Groups “Vocals” & “Instruments”. If using the Drum kit, unmute “Drum” Mute Group also

 


As a musician or vocalist plays/sings, adjust the corresponding slider to an appropriate volume level.

04 Media Volume & Closing Down



Sound from the Media Computer (Mac Mini) is run through channel 31 (DVD) on the board.

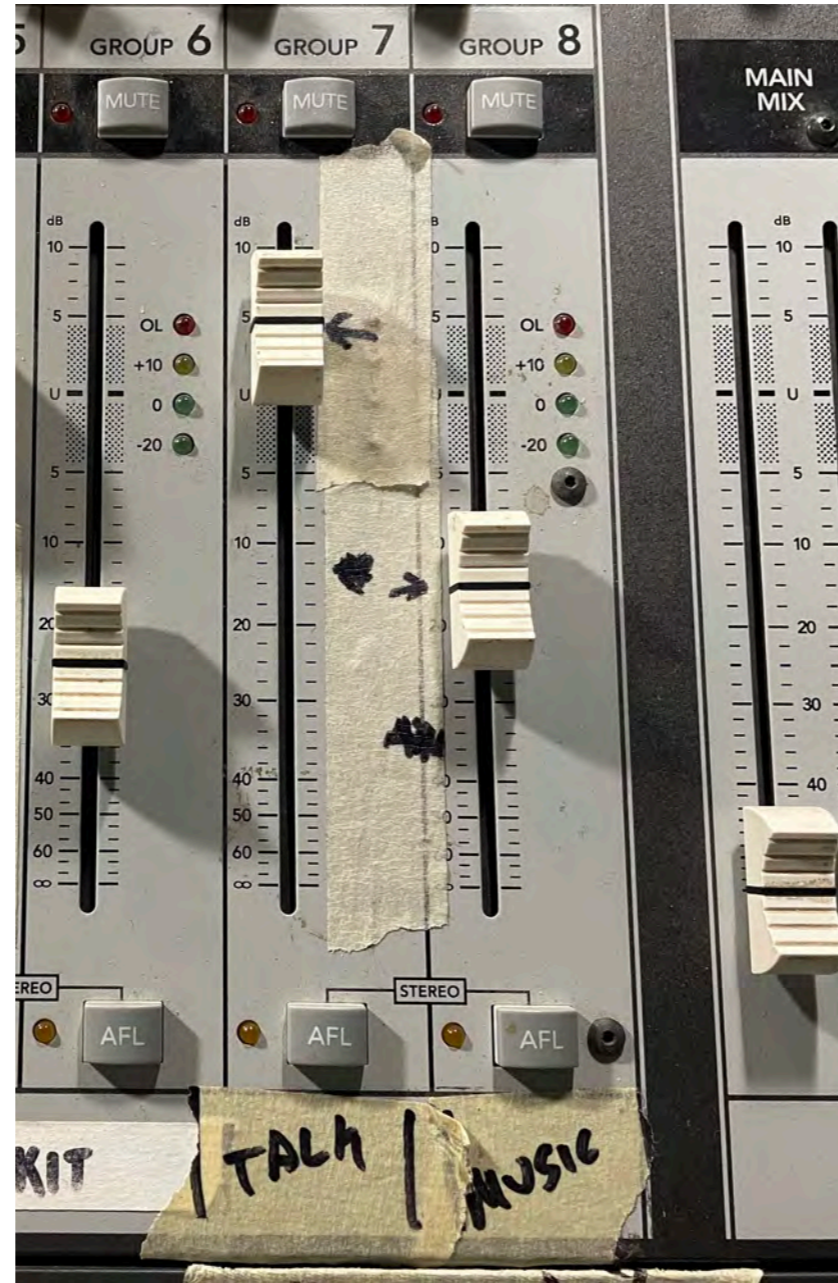

“TALK” and “MUSIC” need to be at their indicated levels to be broadcast to the nursery, the TV in the foyer, and the LIVESTREAM

 


When finished using the board, Turn this switch OFF first


05 Final Steps



Turn this switch OFF

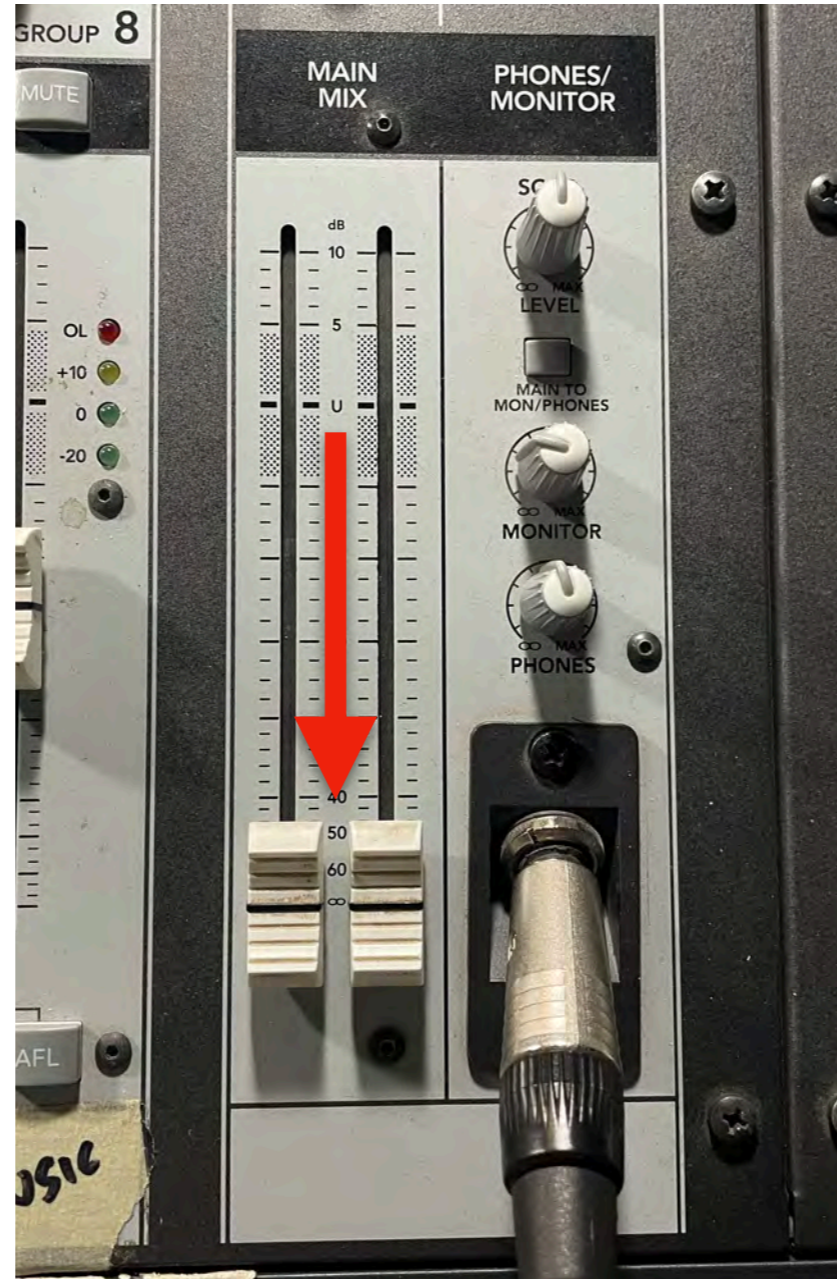

 Slide the Main Mix sliders back down to the bottom

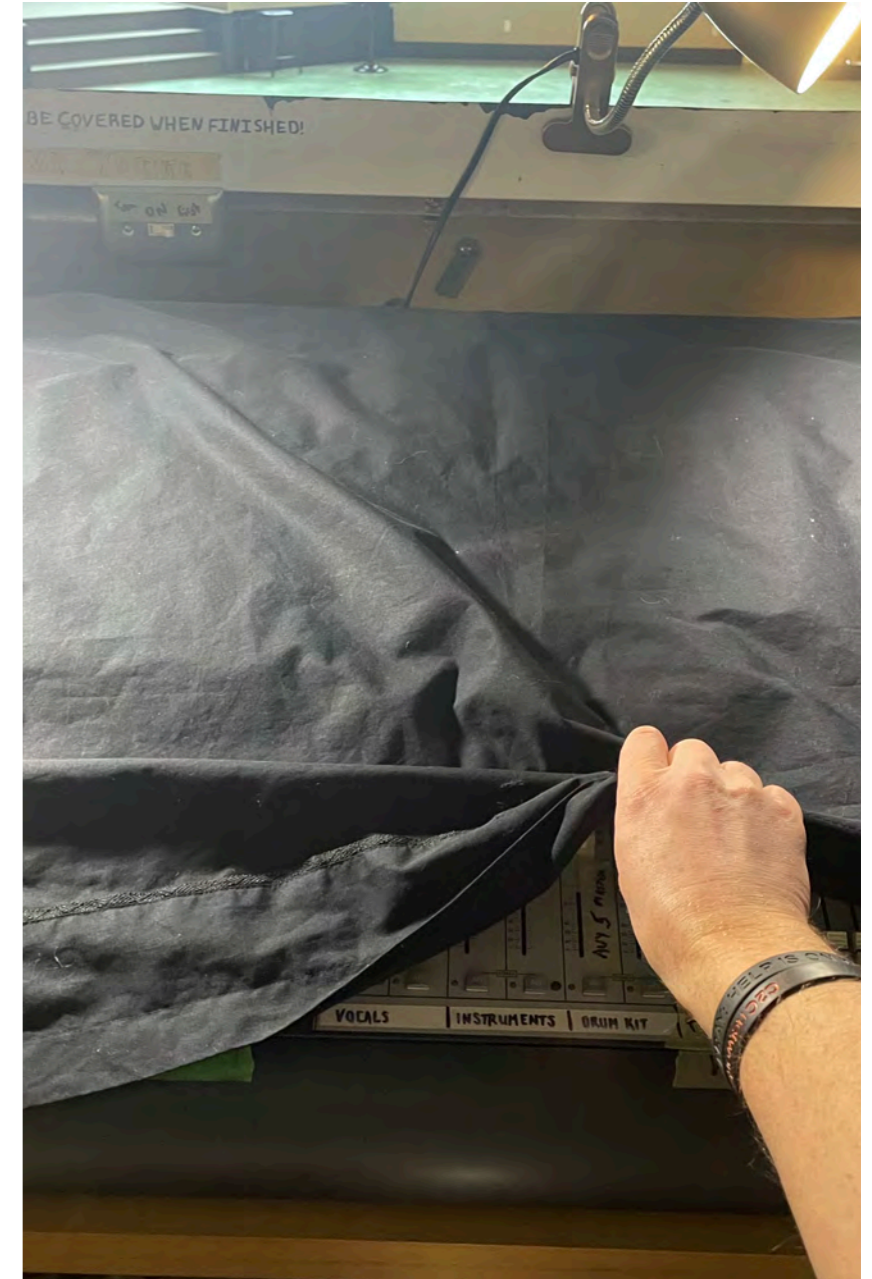

Put the black cover sheet back on the board for protection



This is the light switchboard on the wall in the Soundbooth. Turn them all on EXCEPT for the ones labelled "SPOT". Toggle the "House Lights" as needed. It's nice to have them OFF for Worship but ON for Teaching.

06 Lights - Stage LEDs



For the Stage LEDs to work, this switch has to be ON and so do the two switches labeled "LED" on the wall switches.



There is a door next to the soundboard. Open it.

06 Lights - Stage LEDs



Locate this device at the bottom of racked components.



There are 6 “CHASES”. Press the number “1” once. If you accidentally press a different numbered button and you see strange coloured lights on stage, just press “1” once after that and it should go back to a plain white light. If you’re looking for a different look, cycle through different numbered CHASES till you find one you like. BUT DO NOT adjust anything else on it.